

BLACK DIAMOND PATH LIGHT

DESCRIPTION

 
The Black Diamond Path Light is available without a lamp or with a G4 Ecostar lamp to be installed. Simply install the lamp and screw on the Black Diamond Path Light top. The threaded top design allows the top to stay straight on the fixture, and also includes a white reflective surface underneath. The spun brass construction features a baked enamel finish in black (BK) or bronze (BZ). Overall height is 18.25”.

BLACK DIAMOND PATH LIGHT


Use	Path, Area, and Garden Accent Lighting	
Finish	Black or Bronze	
Includes	ABS Mounting Stake	
Warranty	10 Year Warranty on Black Diamond Fixtures	
Order With Lamp	G4 Ecostar, 3W, 2700K	BD-PL-ECO-G4 BD-PL-ECO-G4-BZ
	G4 Ecostar, 3W, 3000K	BD-PL-ECO-G4-BK-3000 BD-PL-ECO-G4-BZ-3000
Order Without Lamp	Fits G4 Bi-Pin	BD-PL-ECO-G4-NL BD-PL-ECO-G4-BZ-NL



Black Brass
Baked Enamel (BK)



Bronze Baked
Enamel (BZ)

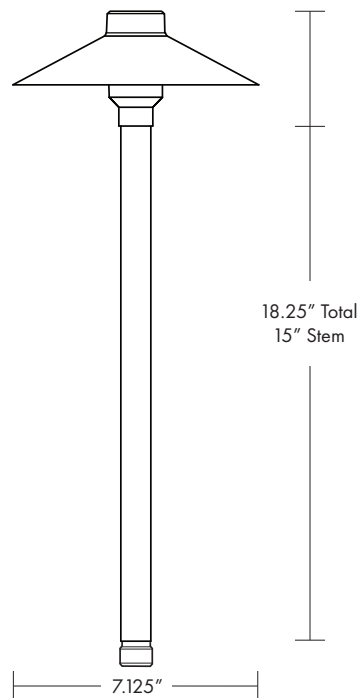 



BD-PL-ECO-G4

SOFT SOIL APPLICATIONS: INSTALLING THE GROUND STAKE & FIXTURE

1. Connect the power cable from the fixture body to the landscape cable.
2. Lay the power cable into the slotted relief on the stake.
3. Press the fixture and stake into the ground.
4. Use a level to ensure the top of the stake is level with the ground.

HARD SOIL APPLICATIONS: INSTALLING THE GROUND STAKE & FIXTURE

1. Unscrew the fixture body from the stake.
2. Dig a hole approximately 4" wide by 10" deep and gently tap the stake into the ground with a rubber mallet.
3. Use a level to ensure the top of the stake is level with the ground.
4. Reinstall the fixture body onto the stake and lay the power cable into the slotted relief on the stake.
5. Connect the power cable from the fixture body to the landscape cable.

INSTALLING THE LAMP

1. Loosen the threaded jam nut toward the stem.
2. Unscrew the lid from the stem.
3. Install the G4 Ecostar Bi-Pin into the socket.
4. Screw the lid onto the stem.
5. Adjust the threaded ring until you achieve the light pattern you want.